

GENERAL MAINTENANCE

L-BAR SEALERS

REQUIRED TOOLS:

- CLEAN CLOTH
- AIR BLOWER
- SAFETY GLOVES
- TEFLON TAPE- 1/2" & 3/4"
- SCISSORS
- HIGH-TEMPERATURE CHAIN LUBRICANT



MAINTENANCE PROCEDURE

STEP 1 PREP THE MACHINE

Blow air around the machine using compressed air, paying special attention to all moving parts.



Heat your knife. You can do this by either activating the L-Bar by pressing down or pressing and holding the limit switch a few times.

STEP 3 CLEAN THE KNIFE



Use a clean cloth and raise the film clamp and wipe the knife for any excess plastic residue.

ALWAYS WEAR APPROPRIATE SAFETY GLOVES WHEN PERFORMING CLEANING FOR A KNIFE.

WWW.BESTPACK.COM VERSION 1.0_0924

STEP 4 TEFLON TAPE MAINTENANCE

Check the condition of your Teflon tape. If burnt, if will need to be replaced.

First, remove the Teflon tape from the seal pad. If the sealing pad is in good condition, reattach it in its original position.

STEP 5 SEAL PAD MAINTENANCE



Next, apply the 3/4" Teflon tape on both seal pads.

Ensure that when applying the Teflon tape, no overlap of the Teflon Tape occurs

STEP 6 APPLY TEFLON TAPE



Then, use the 1/2" Teflon tape, placing it as centrally as possible on the seal pad.

Ensure that when applying the Teflon tape, to not overlap.

Cut excess Teflon tape from both sides.

STEP 7 SHRINK TUNNEL MAINTENANCE



Turn on the shrink tunnel power and heater.

Increase the conveyor speed to the maximum.

STEP 8 SHRINK TUNNEL MAINTENANCE



DO NOT USE ANY OTHER OIL EXECPT HI-TEMP CHAIN LUBE

Apply the oil to the chain evenly and continuously to entire chain.

Let the chain complete a full rotation while continuing to apply the oil.

Repeat the lubrication on the other side of the conveyor.



RELIABLE SUPPORTWHEN YOU NEED IT MOST

The BP360 support program provides you with personalized guidance, expert troubleshooting, and 24/7 support to enhance your solution's performance through:

- BPA Rewards Program
- Access to Real Time Data with DAS
- Phone & Online Support
- 24/7 Resource Web Center via Our Help Website

START EXPLORING HERE:

HELP.BESTPACK.COM

LOOKING FOR SPARE PARTS? CONTACT US AT: ORDERS@BESTPACK.COM



For more information please go to: **WWW.BESTPACK.COM** or call us at **1.888.588.2378**